



Technical information


What size is the consumer's hitch?

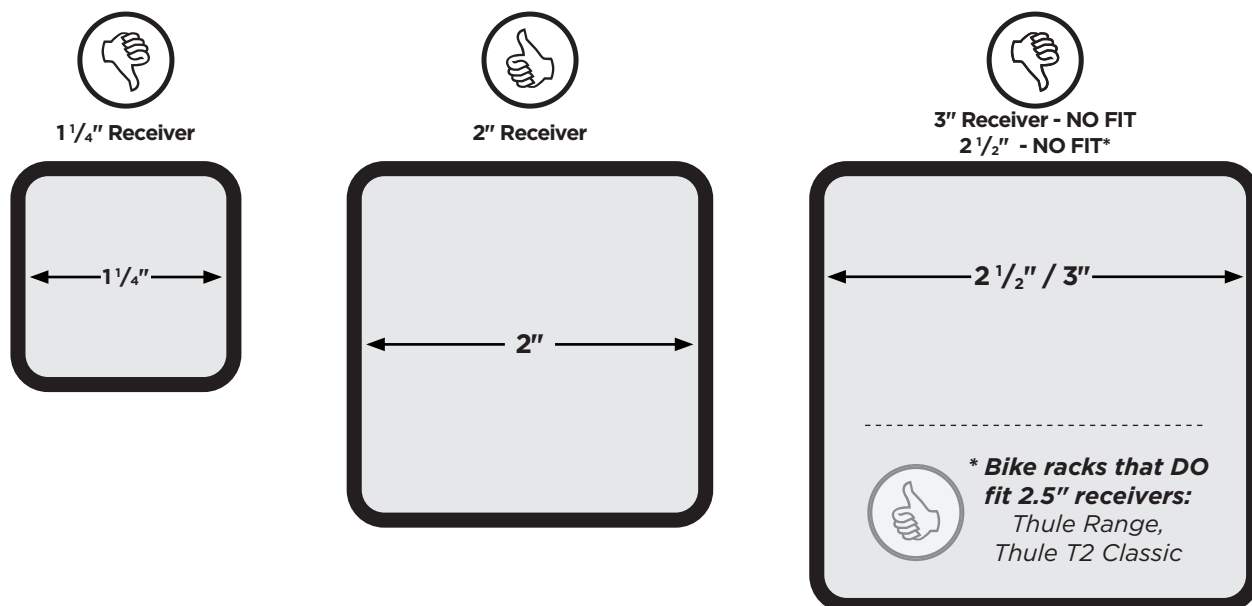


What class is the consumer's hitch?

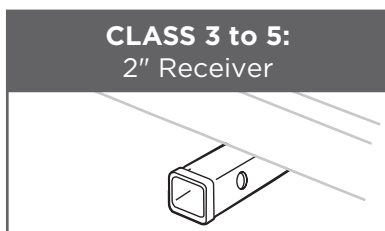

Consumer's hitch pin hole depth?

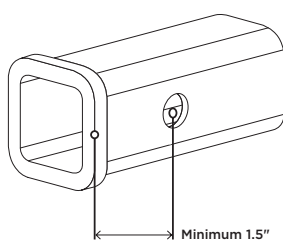

All Thule hitch racks
approved for use.

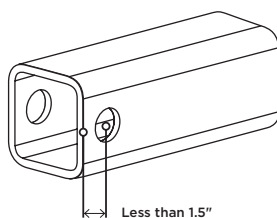

See chart to confirm if Thule
hitch rack is approved for use.

PLATFORM	Hitch Rack	Pin Hole Depth Requirement
	Thule ReVert	
	9024500 (4B_2")	1.5"
	9026500 (6B_2")	1.5"

Technical information



Consumer's hitch receiver depth?

To ensure proper fit, it's important to know the depth of your receiver.

Determine this by doing the following:

- With a ruler inserted in the receiver, measure from the center of the hitch mounting hole to the point where you make contact with an obstacle. **This is your receiver depth.**
- If you do not contact a back-stop or your hitch receiver does not have a backstop, another potential point of contact could be an undercarriage-mounted spare tire or the undercarriage itself.
- Using the table in the next page, compare your measurement to see which hitch racks will work with your vehicle.

Your receiver depth must be equal to or greater than the product measurement listed in the table for a proper fit.

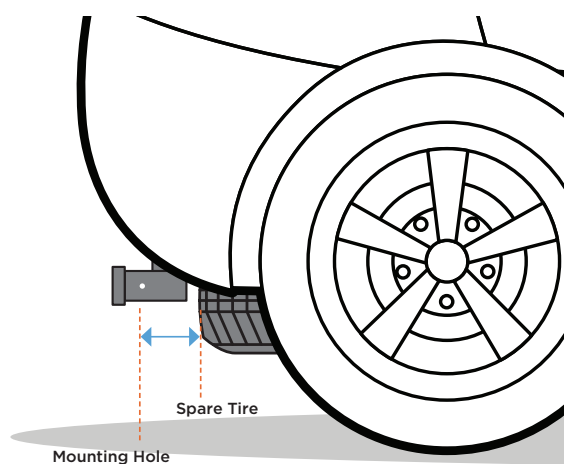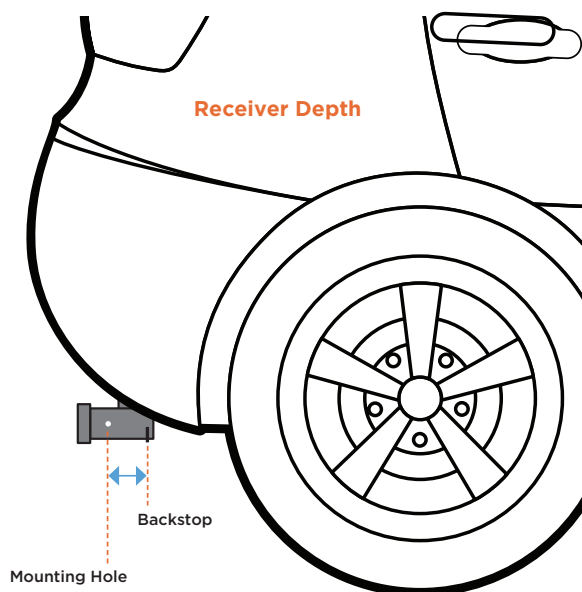

PLATFORM	Hitch Rack	Receiver Depth
	Thule ReVer	
	9024500 (4B_2")	2.55"
	9026500 (6B_2")	2.55"


Technical information

Consumer's hitch bumper clearance?

Make sure your bumper will not interfere with the Thule hitch rack. Measure the distance from the center of the mounting hole on your hitch to the end of your bumper.

This is your bumper clearance.

Your bumper clearance must be equal to or less than the product measurement listed in the table for a proper fit.

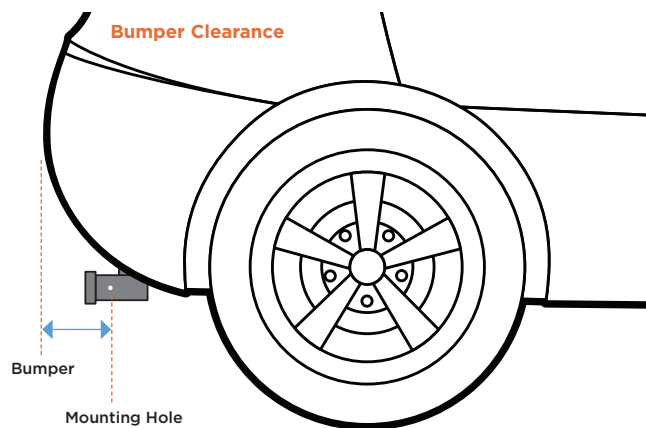

PLATFORM	Hitch Rack	Bumper Clearance
	Thule ReVert	
	9024500 (4B_2")	12.9"
	9026500 (6B_2")	12.9"


Consumer's spare tire clearance?

If you have a spare tire on the back of your vehicle it may interfere with the installation of your Thule hitch rack. Measure the distance from the center of the mounting hole on your hitch receiver to the end of your spare tire.

This is your spare tire clearance.

Your spare tire clearance must be equal to or less than the product measurement listed in the table for a proper fit.


PLATFORM	Hitch Rack	Stowed Spare Tire Clearance	In-use Spare Tire Clearance
	Thule ReVert		
	9024500 (4B_2")	12.9"	-NA-
	9026500 (6B_2")	12.9"	-NA-

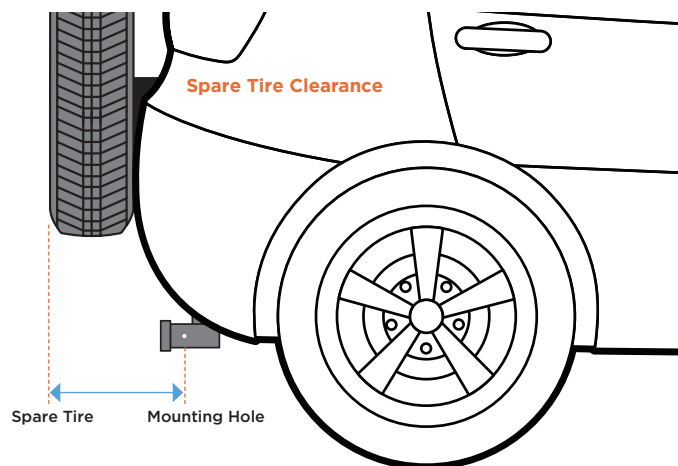

Consumer's garage clearance?

If you will be parking your vehicle in a garage with the rack mounted, you can use these measurements to help you determine if there will be any interference issues with fitting your vehicle into your garage space with the rack in the stowed position or deployed position.

Garage Clearance

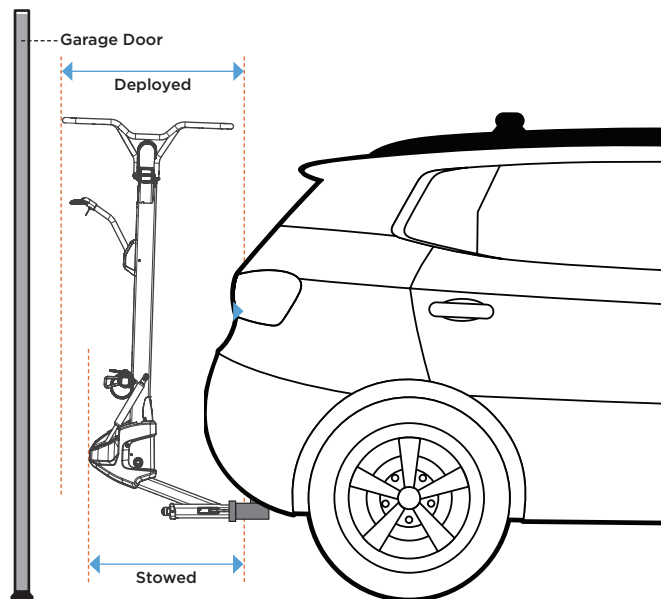


PLATFORM	Hitch Rack	Stowed Clearance	Deployed Clearance
	Thule ReVert		
	9024500 (4B_2")	27.5"	-NA-
	9026500 (6B_2")	27.5"	-NA-

Hitch dimensions

Through we design our hitch-mounted bike carriers to be as universal as possible, all vehicles are designed differently. These diagrams have been designed to help you better understand the “room” our hitch-mounted bike racks need to function properly.

Tilt hitch racks

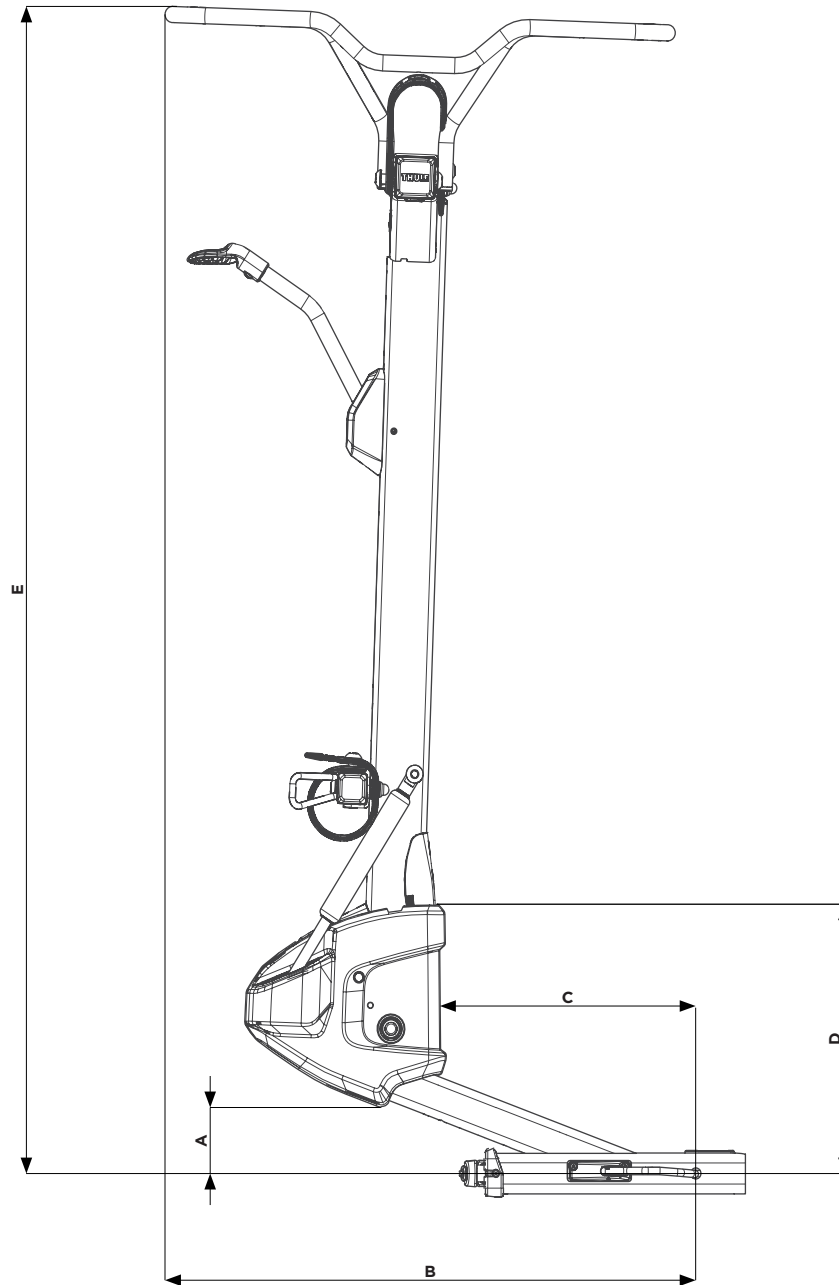

MODEL	A	B	C	D	E
Thule ReVert					
9024500 (4B_2")	3.2"	27.5"	12.9"	13.1"	56.6"
9026500 (6B_2")	3.2"	27.5"	12.9"	13.1"	56.6"